



SALAD BOWL

Merkury

Ø 130 mm / 714  
0,20 l / Ø 150 mm / 718  
0,30 l / Ø 180 mm / 719  
0,50 l / Ø 210 mm / 721



BOUILLON CUP AND SAUCER

Merkury

0,32 l / Ø 160 mm / 717, 715



SOUP AND SAUCER

Merkury

0,32 l / Ø 160 mm / 716, 715



MUG

Merkury

0,30 l / 710



CUP AND SAUCER

Merkury

0,15 l / Ø 140 mm / 700, 712  
0,20 l / Ø 140 mm / 701, 712  
0,25 l / Ø 150 mm / 703, 713



PICKLE DISH

Merkury

Ø 215 mm / 7304



MILK JUG

Merkury

0,03 l / 7001  
0,15 l / 7005



NAPKIN  
HOLDER

Merkury

/ 789



EGG CUP

Merkury

/ 787



PEPPER SHAKER

Merkury

60 mm / 786



SALT SHAKER

Merkury

60 mm / 785



GRAVY BOAT

Merkury

0,30 l / 782



SUGAR BOWL

Merkury

0,20 l / 779



COFFEE POT

Merkury

0,30 l / 773  
0,60 l / 774  
1,35 l / 777



VASE

Merkury

3,00 l / 764



OVAL DISH

Merkury

Ø 230 mm / 754  
Ø 290 mm / 758  
Ø 340 mm / 760  
Ø 380 mm / 762



PLATE FLAT

Merkury

Ø 160 mm / 728  
Ø 190 mm / 730  
Ø 210 mm / 731  
Ø 240 mm / 734  
Ø 250 mm / 736  
Ø 280 mm / 739